
How to upgrade from STEM Meister to STEM Meister G2

About STEM Meister G2

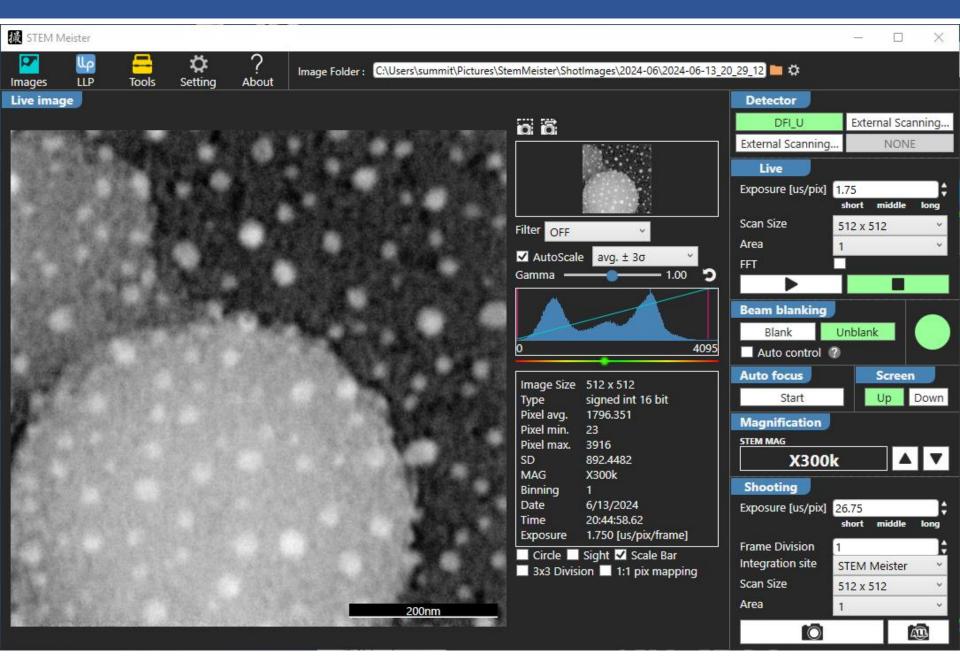

Features of STEM Meister G2


- STEM Meister G2 is the next generation of STEM Meister, with a sophisticated interface and higher stability.
- Upgrading from the current STEM Meister can be done in just a few steps.
- The dongle(HASP) for STEM Meister is also valid for STEM Meister G2.
- STEM Meister G2 can coexist with the existing STEM Meister. There is no risk in trying it out.

Installation requirements of STEM Meister G2


The OS must be one of the following.

- Windows 10
- Windows 11

STEP 1: Check version of existing TEM External

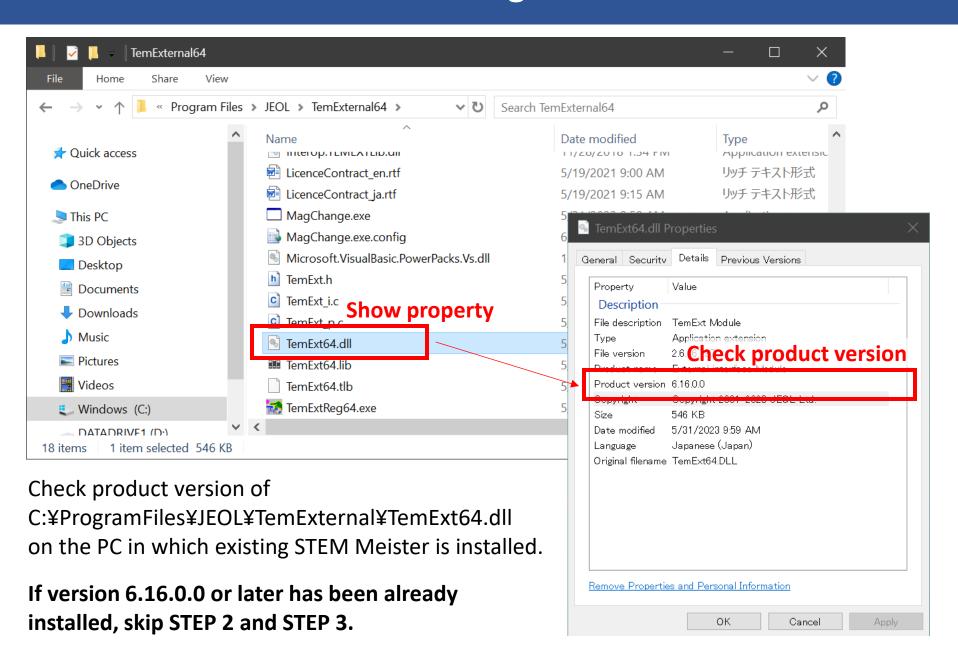


STEP 2: Download TEM External V6.16.0.0 Installer

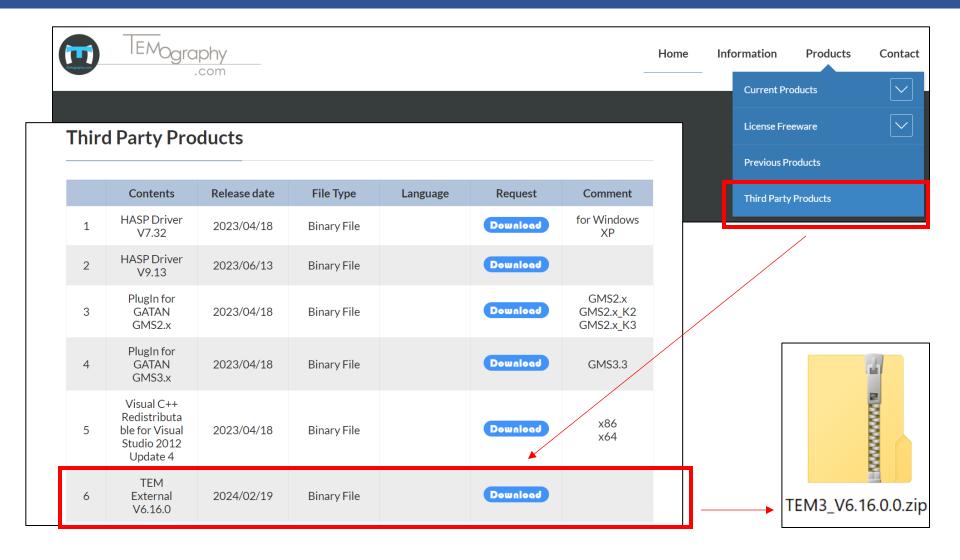

Visit TEMography.com web site to download TEM External V6.16.0.0 (TEM3_V6.16.0.0.zip).

STEP 3: Install TEM External V6.16.0.0

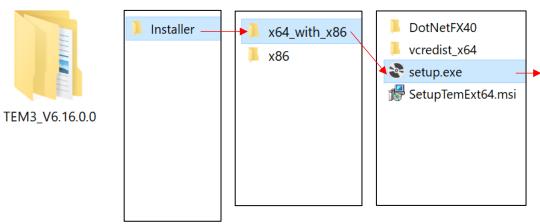

Welcome to the TEM External 32bit and 64bit
Setup Wizard

The installer will guide you through the steps required to install TEM External 32bit and 64bit on your computer.

WARNING: This computer program is protected by copyright law and international treaties. Unauthorized duplication or distribution of this program, or any portion of it, may result in severe civil or criminal penalties, and will be prosecuted to the maximum extent possible under the law.

Unzip the zip file downloaded from TEMography.com. Then find setup.exe and execute it on the PC in which existing Shot Meister is installed.



If higher version has been already installed, the installer should NOT be run.


If the input fields for IP Address, Normal Port, and Notify Port appear during the installation process, set them as shown in the table on the right.

IP Address	IP Address of the PC in which TEM Center is installed.
Normal Port	2001
Notify Port	2010

STEP 4: Install STEM Meister G2



Execute

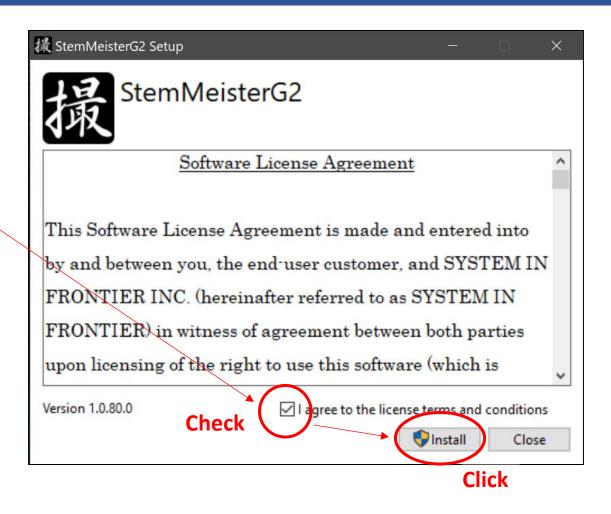

Execute Setup_StemMeisterG2.exe to install STEM Meister G2.

STEP 5: Make sure TEM Center is running in STEM mode



Make sure that TEM Center is running, and the operation mode is STEM mode (scanning mode) but not TEM mode.

STEP 6: Inherit existing STEM Meister setting



Double click


Double click the STEM Meister G2 icon on the desktop to show the window asking how to set up.


Click the button indicating the location of existing STEM Meister to inherit the settings.

Then the Initial Settings window is displayed as shown on the next page.




In rare cases, there may be multiple candidates for inheriting setting. If not sure which one to choose, please contact us via contact form of Temography.com.

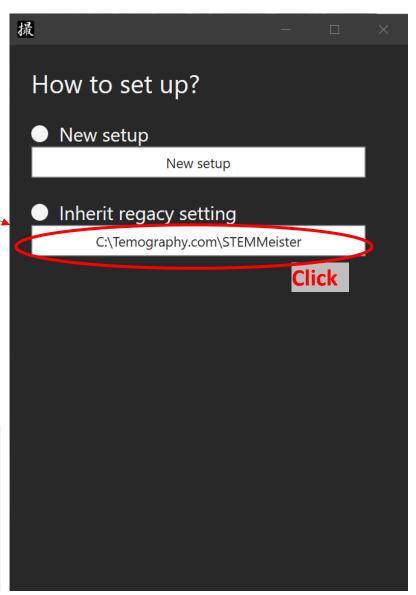

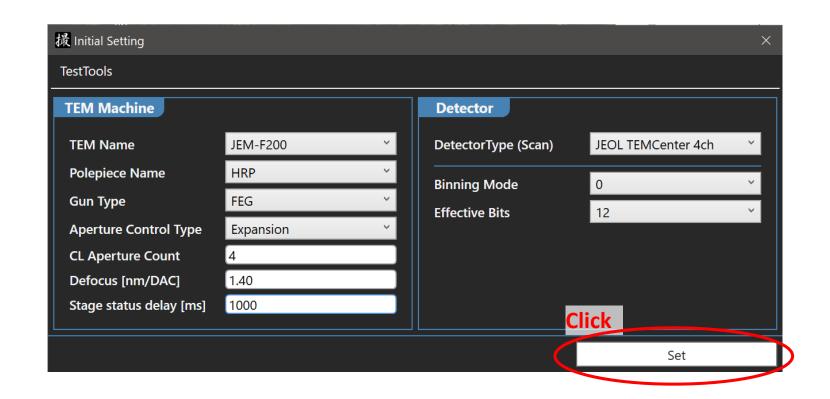


On Initial Setting window, do not change any settings and just click Set button. Then STEM Meister G2 main window is displayed as shown on the next page.

STEP 7: Check Live image acquisition

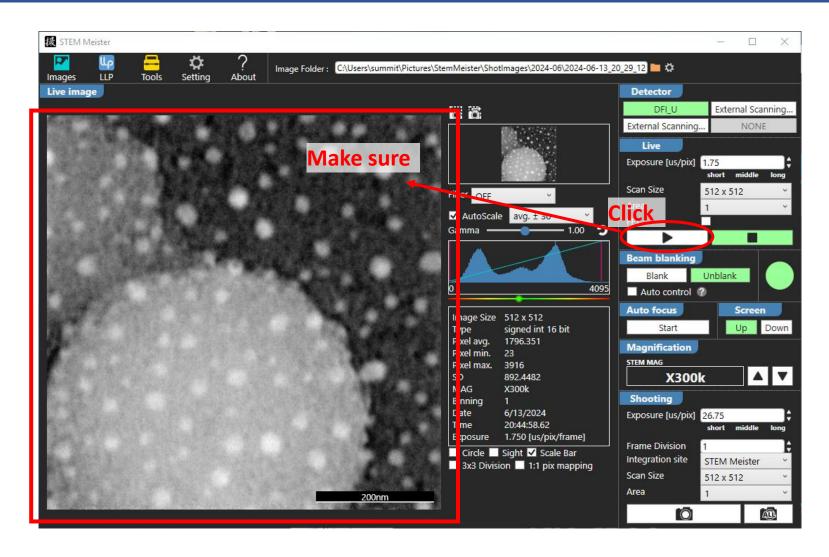

Make sure that the Live image acquisition works fine.

STEP 8: Check shooting image

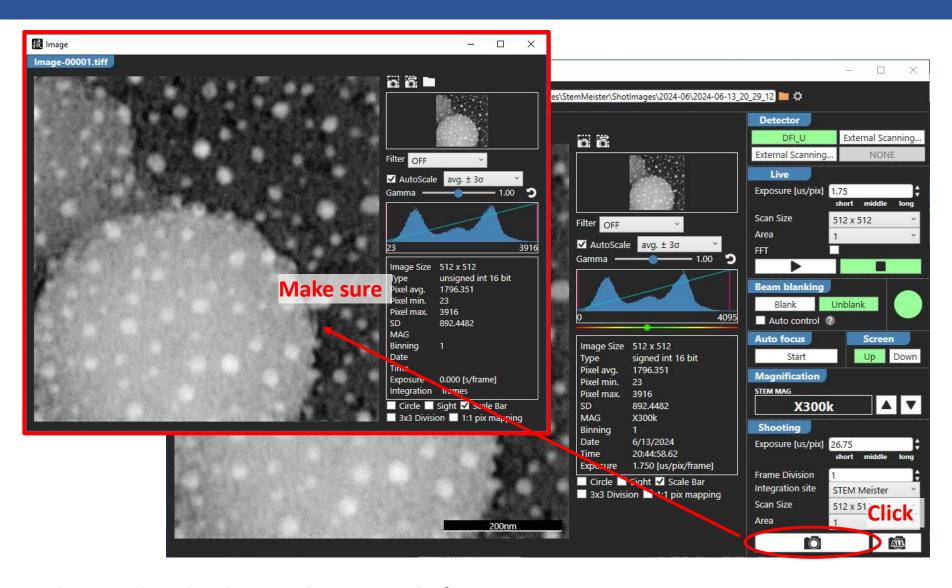

Make sure that the shooting button works fine.

TROUBLE SHOOTING

If STEM Meister G2 startup fails

If STEM Meister G2 does not start properly, starting STEM Meister G2 once with administrator privileges may solve the problem.

After that, make sure that it works fine without any problems with normal privileges.

Any other trouble

Feel easy to contact us via contact form of Temography.com.